



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

Wireless karaoke speaker

Bezdrátový karaoke reproduktor

Bezdrôtový karaoke reproduktor

Vezeték nélküli karaoke hangszóró

Beprzewodowy głośnik karaoke

SAFETY INSTRUCTIONS

This product has been designed with the utmost safety in mind. However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

Power

Power supply of this unit must be match the serial plate data.

Heat source

Keep this unit out of heat sources like stove or direct sunlight.

Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.
- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

Maintenance

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing the cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

Replacement of parts

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

Safety check

After completing maintenance, ask your service technician to perform an on-site safety check to ensure that the unit is operating safely.


Remark:


Before using this product, read these instructions carefully and keep it well for future use.

SUPPLY CONTENT

- 1x BT speaker SSS 3400K
- 2x Wireless microphone
- 2x Microphone holder
- 1x AUX-IN cable (3.5mm)
- 1x USB-C charging cable
- 1x User's manual

DESCRIPTION OF THE BT SPEAKER AND MICROPHONE

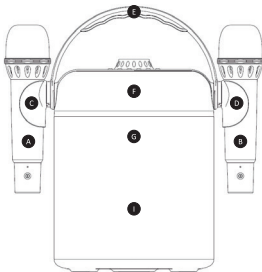

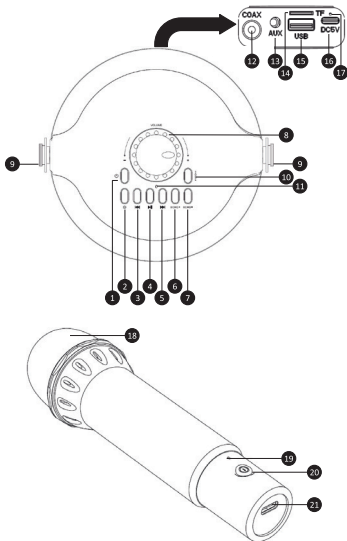

SSS 3400K front side	
A	Wireless microphone 1
B	Wireless microphone 2
C	Removable holder for wireless microphone 1
D	Removable holder for wireless microphone 2
E	BT speaker carrying handle
F	LED effect
G	Treble speaker
I	Wideband speaker
SSS 3400K top side	
1	On/off button
2	Light effects button (change/on/off)
3	Previous track button, microphone volume down
4	PLAY / PAUSE / Change Source button (Bluetooth, memory card, USB, AUX-IN, COAX)
5	Next track button, microphone volume up
6	"ECHO -" level down button
7	"ECHO +" level up button
8	Rotary volume down/up control
9	Projections for mounting the microphone holder

10	TONE button to change the predefined voice effect
11	LED indicator
SSS 3400K back side	
12	COAX input
13	Input for audio AUX IN mini jack (3.5mm)
14	Memory card slot
15	USB-A for playback from memory device
16	Charging socket (USB-C)
17	LED charging indicator
Wireless microphone	
18	Sound sensor
19	LED indicator
20	On/off button
21	Charging socket (USB-C)

PUTTING INTO OPERATION

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Hold down the power on button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power on button. To change the source of the music being played, press and hold the "Play / Pause / Change Source" button while it is on.

TRANSMISSION AND BT SPEAKER POSITION

To carry the BT speaker, use the "E" handle located on the top of the BT speaker. The speaker offers 1 positioning option. The side designated for the correct position is always fitted with rubber feet on the underside of the BT speaker.

Caution: always position the equipment so that it does not endanger the health of persons in the vicinity or cause damage to property.

PAIRING DEVICES VIA BLUETOOTH

Turn on the BT speaker and search for its Bluetooth name "**SSS 3400K**" in the device to be paired, then start the pairing

process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect the paired device, end the pairing session on your mobile device or long hold the "Change source" button. Disconnection will be indicated by an acoustic tone.

Remark: To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.

AUDIO AUX IN

The BT speaker is equipped with a 3.5mm jack. Your device can be connected to the BT speaker via the supplied audio cable. First connect the audio plug to your device and then to the BT speaker's jack.

Please note: before connecting your device and BT speaker, make sure that the output signal from your device is at the minimum level (minimum output volume). This will prevent the BT speaker from damage. When the audio cable is connected, the BT speaker does not meet the water ingress protection class.

Remark: In this mode, not all functions of the BT speaker are available. The Bluetooth function is not active if the audio jack is connected to the BT speaker.

COAX INPUT

Connect the digital input to the output of your device. Switch the input mode to COAX by pressing and holding the “Play / Pause / Change Source” button. Set the correct codec on the output device. A poorly chosen codec on the output device will manifest itself in the BT speaker as a rattle.

RESET BUTTON

To reset the BT speaker, press and hold the “ECHO + Button” and “Light Effects Button” simultaneously. Reset will turn off the BT speaker. Switch on the BT speaker.

RECOMMENDATION: If there is an unexpected problem with the BT speaker connection or its functions. Reset the BT speaker.

PLAY / PAUSE / CHANGE SOURCE BUTTON

Press the “Play / Pause / Change Source” button briefly to start or pause music playback during a Bluetooth connection when a memory card or USB storage media is inserted. Long press the “Play / Pause / Change Source” button to change the source from the input or media being played.

VOLUME CONTROL

The BT speaker volume (+/-) is controlled using the rotary control on the BT speaker. Turn the rotary control to the left to reduce the volume. Turn the rotary control to the right to increase the volume. The volume setting does not apply to microphone volume settings. For more information on setting the microphone volume, see **Wireless microphones**.

Warning: Before starting to play music, make sure the volume control is not turned up to the maximum level.

LIGHT EFFECTS

The BT speaker is equipped with lighting effects at the top of the device. Changing the light effect is done by pressing the “light effects” button, 6 light effects are preset. To turn off the light effects, long hold the “light effects” button. To switch on the light effects, long press the “light effects” button.

PLAYBACK FROM USB STORAGE MEDIA / MEMORY CARD

USB-A playback

Insert the USB storage disc with audio content in the USB slot. Long press the “Play / Pause / Change Source” button to switch to USB

playback mode. The music playback from the connected storage will start automatically. Upload your music to the storage in the order in which it will be played by the BT speaker. Supported playback formats are listed in the technical specification.

Memory card playback

Insert the memory card with the contacts facing the USB-A port. When you insert a memory card, the BT speaker will automatically start playing back its contents. If there is no file to play on the memory card, the BT speaker will switch to the last active source being played. To release the TF memory card, press it gently into the BT speaker with your fingernail or a blunt instrument and the card will release. Then you can carefully remove it with your fingernails (or with tweezers). Supported playback formats are listed in the technical specification.

Warning: Due to a number of devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32. The playback of protected media, files or content stored inside them may fail.

WIRELESS MICROPHONES

2 wireless microphones are included in the package. Attach the microphone holders “C” and “D” to the BT speaker projections by sliding them on.

Before first use, charge both microphones using the USB-C charging cable. The charging process will be indicated by a red LED.

Microphone control:

is done with the “on/off” button on the microphone.

Turning the microphone on and off.	To switch on, press and hold the “on/off” button on the microphone.
Change the volume of the microphones.	To lower the volume, hold down the previous track button on the BT speaker.
	To increase the volume, hold down the next track button on the BT speaker.
Change the ECHO mode.	To lower the volume, press the previous track button on the BT speaker.
	To increase the volume, press the next track button on the BT speaker.
Change the effects of the voice.	Press the TONE button “10” repeatedly to change the voice effect on the BT speaker.

LED indicator:

Red uninterrupted led – microphone is charging / microphone is discharged

No indication – microphone off/charged

Green intermittent indication – microphone connecting to BT speaker

Green uninterrupted indication – successful connection of microphone to BT speaker

Warning: Avoid feedback by keeping the microphone far enough away from the SSS 3400K speakers.

If you get too close, feedback will occur and may result in damage to the speakers or the hearing of a person near the system.

CHARGING THE BT SPEAKER

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker. Use your own 5V, 2A charging adapter. The charging indicator on the back will glow red until the battery is fully charged. A low battery level will be indicated by an audible alert and a blue intermittent LED indicator on the top of the BT speaker.

Warning: For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best not to start charging until the low battery audible alert is output. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation: If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

TECHNICAL SPECIFICATIONS

SSS 3400K

Wireless karaoke speaker

Features:

Two wireless microphones in the package

Light effects with the option to switch off

Maximum speaker output 30W

Sound:

Maximum speaker output 30W

1 full-range + 1 wideband speaker and 1 tweeter

Frequency response: 30Hz–20kHz

Total harmonic distortion: $\leq 5\%$

Wireless microphones

Bluetooth connection V5.2

Range up to 10m

Transmission frequency 60Hz–13kHz

Rechargeable microphone battery: 1,200mAh Li-Ion each

Up to 40 hours of operation on a full charge

ECHO function

Inputs:

Bluetooth Audio 5.0

AUX audio input (3.5mm stereo connector)

Playback from USB (up to 32GB / MP3)

Card Slot (up to 32GB / MP3)

Coaxial input

Other:

Rechargeable speaker battery: 4,000mAh Li-Ion

Playback time of up to 9 hours (@ 50% volume)

USB-C power

Accessories: USB charging cable, 3.5mm external cable (AUX),
user's manual

Dimensions: 280×273×168mm

Weight: 2,000g

Bluetooth microphone	Version	5.2
	Maximum Transmitter Power	100mW @ 2.4GHz– 2.4835GHz
Bluetooth SSS3400K	Version	5.0
	Maximum Transmitter Power	100mW @ 2.4GHz– 2.4835GHz
	Codec	SBC
	Profiles	A2DP / AVRCP

INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS

Take the packaging material to a collection yard for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product, accessory or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or in some European countries, you can return your products to your local retailer when you buy an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. Please contact your local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

For companies in the European Union

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

FAST ČR, a.s. hereby declares that the radio device type SSS 3400K conforms to the 2014/53/EU directive. The full text of the EU Declaration of Conformity is available at: www.sencor.eu.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer's address:

FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasy 1621, Říčany 251 01, Czech Republic

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

