



08/02/2024

1A 24080923-永顺源k7 成人 操作指南



QUICK START GUIDE Internet Tablet	TROUBLESHOOTING Q1: The tablet doesn't power on. Make sure the tablet is fully charged. If the battery is low, connect the tablet to the power adapter and wait for it to charge. If the tablet still doesn't power on, try restarting it by holding the power button for 10 seconds. Q2: The tablet doesn't charge. Check the power adapter and the charging cable. Make sure they are connected correctly. If the tablet still doesn't charge, try using a different power adapter and cable. Q3: The tablet is slow to respond. Close all running apps and restart the tablet. If the tablet is still slow, try clearing the cache and data. Q4: The tablet is overheating. Stop using the tablet and let it cool down. Avoid using the tablet in a hot environment. Q5: The tablet is making noise. Check the speaker and the microphone. Make sure they are not blocked. If the noise is still there, try restarting the tablet. Q6: The tablet is displaying an error message. Read the error message carefully. If it's a software error, try restarting the tablet. If it's a hardware error, contact customer support.			
QUICK START GUIDE Internet Tablet	TROUBLESHOOTING Q1: The tablet doesn't power on. Make sure the tablet is fully charged. If the battery is low, connect the tablet to the power adapter and wait for it to charge. If the tablet still doesn't power on, try restarting it by holding the power button for 10 seconds. Q2: The tablet doesn't charge. Check the power adapter and the charging cable. Make sure they are connected correctly. If the tablet still doesn't charge, try using a different power adapter and cable. Q3: The tablet is slow to respond. Close all running apps and restart the tablet. If the tablet is still slow, try clearing the cache and data. Q4: The tablet is overheating. Stop using the tablet and let it cool down. Avoid using the tablet in a hot environment. Q5: The tablet is making noise. Check the speaker and the microphone. Make sure they are not blocked. If the noise is still there, try restarting the tablet. Q6: The tablet is displaying an error message. Read the error message carefully. If it's a software error, try restarting the tablet. If it's a hardware error, contact customer support.			
QUICK START GUIDE Internet Tablet	TROUBLESHOOTING Q1: The tablet doesn't power on. Make sure the tablet is fully charged. If the battery is low, connect the tablet to the power adapter and wait for it to charge. If the tablet still doesn't power on, try restarting it by holding the power button for 10 seconds. Q2: The tablet doesn't charge. Check the power adapter and the charging cable. Make sure they are connected correctly. If the tablet still doesn't charge, try using a different power adapter and cable. Q3: The tablet is slow to respond. Close all running apps and restart the tablet. If the tablet is still slow, try clearing the cache and data. Q4: The tablet is overheating. Stop using the tablet and let it cool down. Avoid using the tablet in a hot environment. Q5: The tablet is making noise. Check the speaker and the microphone. Make sure they are not blocked. If the noise is still there, try restarting the tablet. Q6: The tablet is displaying an error message. Read the error message carefully. If it's a software error, try restarting the tablet. If it's a hardware error, contact customer support.			
QUICK START GUIDE Internet Tablet	TROUBLESHOOTING Q1: The tablet doesn't power on. Make sure the tablet is fully charged. If the battery is low, connect the tablet to the power adapter and wait for it to charge. If the tablet still doesn't power on, try restarting it by holding the power button for 10 seconds. Q2: The tablet doesn't charge. Check the power adapter and the charging cable. Make sure they are connected correctly. If the tablet still doesn't charge, try using a different power adapter and cable. Q3: The tablet is slow to respond. Close all running apps and restart the tablet. If the tablet is still slow, try clearing the cache and data. Q4: The tablet is overheating. Stop using the tablet and let it cool down. Avoid using the tablet in a hot environment. Q5: The tablet is making noise. Check the speaker and the microphone. Make sure they are not blocked. If the noise is still there, try restarting the tablet. Q6: The tablet is displaying an error message. Read the error message carefully. If it's a software error, try restarting the tablet. If it's a hardware error, contact customer support.			
QUICK START GUIDE Internet Tablet	TROUBLESHOOTING Q1: The tablet doesn't power on. Make sure the tablet is fully charged. If the battery is low, connect the tablet to the power adapter and wait for it to charge. If the tablet still doesn't power on, try restarting it by holding the power button for 10 seconds. Q2: The tablet doesn't charge. Check the power adapter and the charging cable. Make sure they are connected correctly. If the tablet still doesn't charge, try using a different power adapter and cable. Q3: The tablet is slow to respond. Close all running apps and restart the tablet. If the tablet is still slow, try clearing the cache and data. Q4: The tablet is overheating. Stop using the tablet and let it cool down. Avoid using the tablet in a hot environment. Q5: The tablet is making noise. Check the speaker and the microphone. Make sure they are not blocked. If the noise is still there, try restarting the tablet. Q6: The tablet is displaying an error message. Read the error message carefully. If it's a software error, try restarting the tablet. If it's a hardware error, contact customer support.			