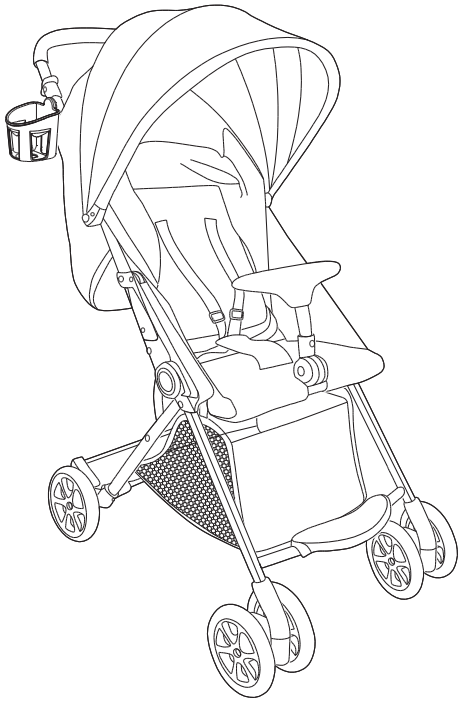
Kinderkraft
To protect.

LITE UP

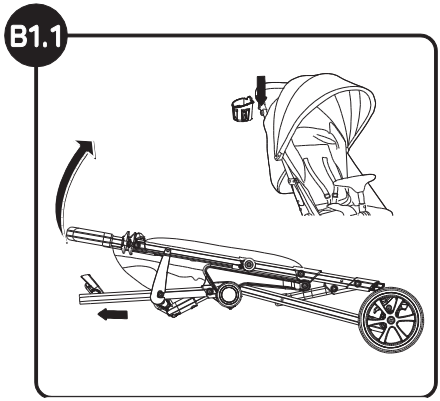


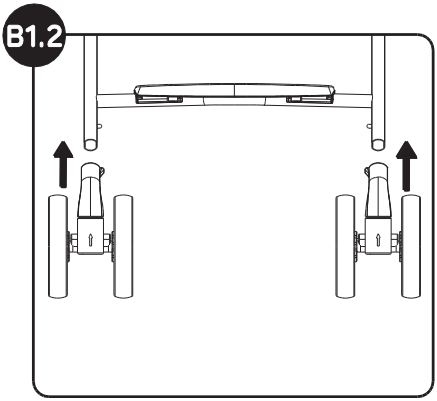
DE Buggy
EN Stroller
ES Silla
FR Poussette
IT Passeggino
PL Wózek spacerowy

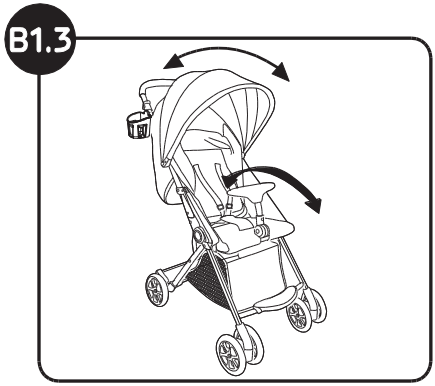
DE BEDIENUNGSANLEITUNG
EN USER MANUAL
ES MANUAL DE USUARIO
FR GUIDE D'UTILISATION
IT ISTRUZIONI PER UTENTE
PL INSTRUKCJA OBSŁUGI

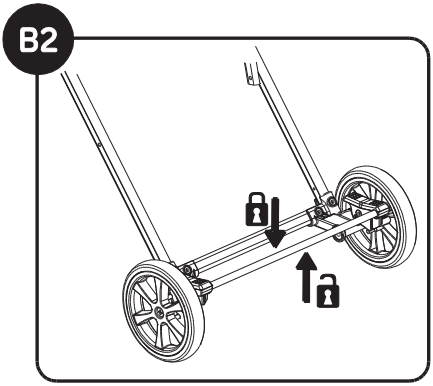
Model: LITE UP
EN 1888:2012

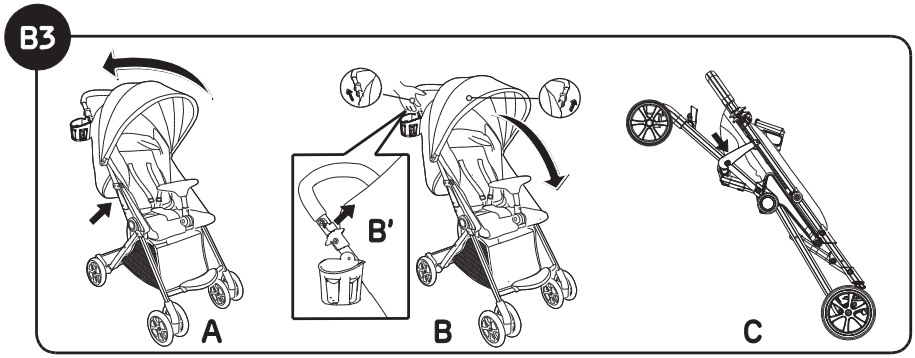
Rev. 1.1


B1.1

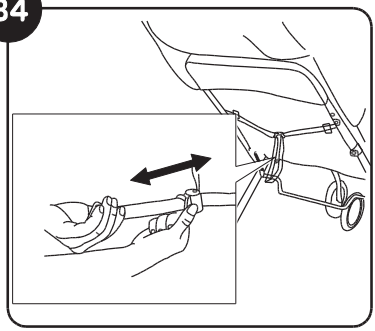

B1.2


B1.3

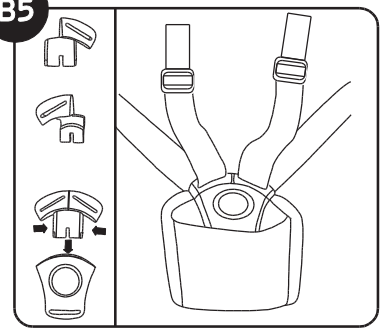

B2


B3
B'
A
B
C

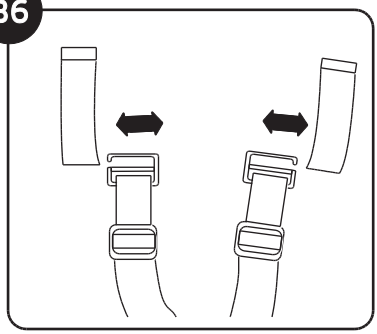
B4



B5



B6



Kedves Vásárló!

Köszönjük, hogy a Kinderkraft termékét választotta. Az általunk tervezett termékek gyermek orientáltak. Az elsődleges szempont mindig a gyerekek biztonsága, kényelme és a termékek kiváló minősége. Ezzel a babakocsival a legjobb döntést hozta!

Fontos - Gondosan őrizze meg az útmutatót.

Biztonsági és gondozási megjegyzések

Figyelmeztetés!

Soha ne hagyja felügyelet nélkül gyermekét!
Használat előtt győződjön meg róla, hogy minden záróeszköz be van kapcsolva.
A baleset elkerülése érdekében, biztosítsa gyermeke távollétét, amennyiben az eszköz kinyitás vagy összecsukás alatt áll.
Ne engedje, hogy gyermeke játsszon a termékkel.
Amennyiben mózeskosarat/sportrészt vagy autós hordozót illeszt a vázra, mindig ellenőrizze, hogy megfelelően vannak csatlakoztatva.
A termék nem alkalmas futásra és korcsolyázásra.
Kor és súlyhatár: születéstől kezdve 15kg-ig használható.
A fekvő pozíciót ajánljuk az újszülött babáknak.
A termék egyszerre egy gyermek szállítására alkalmas.
A bevásárló kosár maximum terhelhetősége: 2kg
A pohártartó maximum terhelhetősége: 0,5kg
Aktiválja a fékeket gyermeke babakocsiba helyezésekor és kivételekor egyaránt.
Minden további terhelés a tolókaron, stabilitási problémákat okozhat.
Kizárólag a gyártó által kibocsátott kiegészítőket és alkatrészeket alkalmazza.
Ne helyezze a terméket nyílt tűz vagy hőforrás mellé.

B. Összeszerelés

1. Nyissa ki a babakocsit
2. Fék/fék kioldása

- Fék lezárása - nyomja le a fékpedált, amely ezáltal megállítja a kerekeket és mozdulatlanná válnak.
- Fék felengedése - engedje fel a fékpedált, és a kerekek újból gurulnak.

3. Babakocsi összecsukása

- Emelje meg a háttámlát és csukja össze a napellenzőt (A ábra). A tolókar jobb oldalán található zárat oldja fel, ezzel egyidejűleg húzza fel a karokat mindkét oldalon és előre nyomva csukja össze a babakocsit (B ábra). A horog be akasztásával rögzítse az összecsukott babakocsit (C ábra).

4. Háttámla beállítása
5. Biztonsági öv használata: A babakocsi biztonsági övei, úgy lettek kialakítva, hogy az újszülött gyerekek számára is használható legyen. Mindig állítsa be a biztonsági övet megfelelően. Mindig használja a biztonsági rendszert.

Középen található gomb segítségével oldhatja ki az övet. Gyermeke biztonságának érdekében, a derékövet és vállövet csatlakoztassa a középső csatba, egészen kattanásig. Az öv beállításához tartsa a csatot és húzza az övet.

6. Az övek eltávolításához (tisztítás céljából) válassza le az övpárnákat és húzza ki a felső vállpántokat a fém csatból.

Az övek visszahelyezéséhez végezze el a folyamatot fordított sorrendben.

C. Karbantartás

A vásárló felelőssége minden funkcionális elem megfelelő összeszerelése, továbbá az összes karbantartás és beállítás elvégzése, a babakocsi megfelelő állapotban való tartásához.

Fontos a babakocsi rendszeres ellenőrzése.

Alkalmazza az alábbi jelentős intézkedéseket, hogy gyermekének biztonságát és a termék hosszú élettartamát biztosítsa:

- Ellenőrizze, hogy minden csavar szilárdan és biztonságosan van rögzítve.
- Ellenőrizze, hogy a kerekek megfelelően vannak felszerelve.
- Ellenőrizze, hogy minden fő-és kiegészítő rögzítő megfelelően működik, amelyek szabadon mozdíthatók bármikor.

Kérjük, ne használja a babakocsit, amennyiben bármi kétsége támadt a használatával kapcsolatban, vagy bármilyen veszélyt észlel.

Amennyiben a kerekek nyikorognak, alkalmazzon rajtuk egy vékony réteg szilikont. Ne használjon olajat vagy zsír alapú terméket, ugyanis azok vonzzák a szennyeződéseket, így a babakocsi mozgását akadályozhatják.

D. Tisztítás

Amennyiben a babakocsi alváza sós vízzel érintkezett, amint lehetséges öblítse le csapvízzel.

Soha ne tárolja nedvesen, nedves körülmények között a babakocsit, ugyanis az penészedést okozhat.

Nedves ruhával, enyhe tisztítószerrel tisztítható.

DEAR CUSTOMER!

Thank you for choosing a product by Kinderkraft. Our designs are child-oriented – safety and quality always comes first, stay comfortable knowing that you have made the best choice.

IMPORTANT - Keep these instructions for future reference.

A Safety and care notes

WARNING!

Never leave your child unattended.

Ensure that all the locking devices are engaged before use.

To avoid injury ensure that your child is kept away when unfolding and folding this product.

Do not let your child play with this product.

Always use the restraint system.

Check that the seat unit attachment devices are correctly engaged before use.

This product is not suitable for running or skating.

Age and weight usage: from 0 months up to 15 kg.
We recommend using lowest reclined position for newborn babies.
This product may only be used by one child at the same time.
The maximum load carried in the basket must never exceed 2 kg.
The maximum load carried in the cup holder must never exceed 0.5 kg.
The parking device shall be engaged when placing and removing the children.
Any additional load attached to the handle will affect the stability of the vehicle.
Only replacement parts supplied or recommended by the manufacturer shall be used.
To not place the product near an open fire or other source of strong heat.

B. ASSEMBLY

1. Unfolding the carriage
2. Break/Break release
   Locking the brake – push down the brake bar so as to lock the pushchair wheels.
   Releasing the brake – to release the brake, rise up the brake bar.
3. Fold the buggy
   Lift the backrest and fold the visor (Fig. A). Release the lock on the right side of the handle (B'), simultaneously pull up the levers on both sides and push forward the whole to fold the stroller (Fig. B). Secure the stroller by means of a hook (Fig. C).
4. Backrest adjustment
5. Using the harness

The buggy's straps are adapted in such a way to enable its use even by new-borns. Adjust the straps each time. Always use the restraint system.
Press the button in the centre of buckle to open it. To secure child, insert waist strap clips to harness strap clips then insert into the centre buckle until it clicks.
To adjust the belts hold the adjustment buckle and pull the straps.

6. To remove the belts (for cleaning) detach the shoulder belt covers and pull the upper shoulder belts out of the metal buckle.
To install the belts slide the upper shoulder belts in the metal buckles and then attach the shoulder belt covers.

C. CARE & MAINTENANCE

• It is the responsibility of the individual consumer purchaser to assure that all functional parts are installed properly, and subsequent normal maintenance services and adjustments necessary to keep the buggy in good operating condition are properly made.
• Your buggy should be periodically checked for indication of potential problems. These are important safety checks for your child's safety and may prevent a shortened product lifecycle, accidents, or harm to your child:
• Check all rivets and connecting devices for tightness and security.
• Inspect all parking devices, wheels and tyres and replace or repair if necessary.
• Check all safety devices for correct operation, in particular the primary and secondary locks. These should be free to move at all times.
• Do not continue to use your buggy if in doubt or you feel it is unsafe.
• If wheels squeak, lubricate sparingly with silicone lubricant. Do NOT use oil or grease based products, as this will attract dirt, which will clog the movement.

D. CLEANING

• If the buggy chassis parts have been exposed to salt water we recommend that they be rinsed down with fresh (tap) water as soon as possible afterwards.
• The product may be sponged lightly using a damp cloth and a mild detergent.
• Do not fold or store the product while wet and never store in a damp environment as this can cause mildew to form.



HERSTELLER/MANUFACTURER/FABRICANTE/FABRICANT/ FABBRICANTE/PRODUCENT/:
4Kraft Sp. z o.o.
ul. Tatrzańska 1/5,
60-413 Poznań, Poland